

# How to Use the OBDII Device with Pumpkin Android Car Stereo

Recently, some guys have inquired the way to use OBDII device with [Pumpkin Android car stereo](#). Therefore, we're going to give the whole instruction to help you guys out.


**Step 1 :** Install an app named "Torque" in your Android car stereo.

Here's the Torque pro from us, please download it.

[https://mega.nz/#!fcVC3C4B!0zge2rH\\_dGTeSJENfpVsphfpU7vPCS9ar9C3ryNtXUA](https://mega.nz/#!fcVC3C4B!0zge2rH_dGTeSJENfpVsphfpU7vPCS9ar9C3ryNtXUA)


**Step 2 :** Plug the OBDII device to your car.

Please make sure that your OBDII scanner is with 4 digital Bluetooth pairing code.

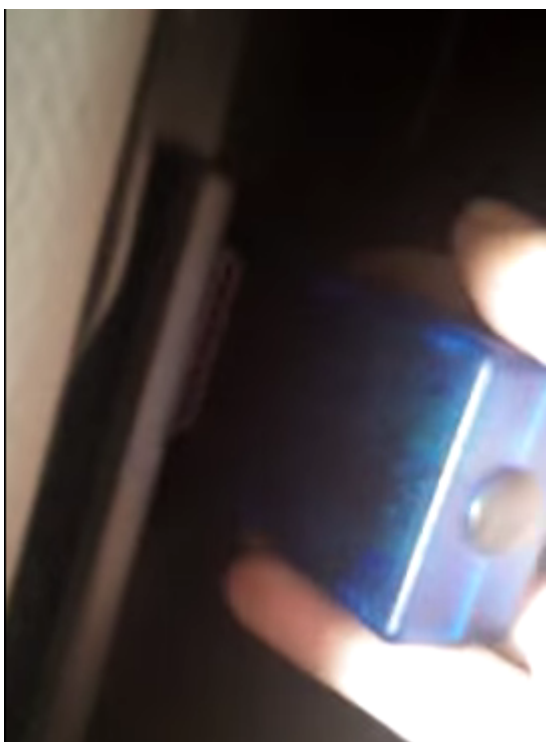

**Step 3 :** Enter the unit's Bluetooth application, and set its p

aring code to the same as the OBDII scanner's. ( Normally, our OBDII device's code would be 1234 or 0000.)

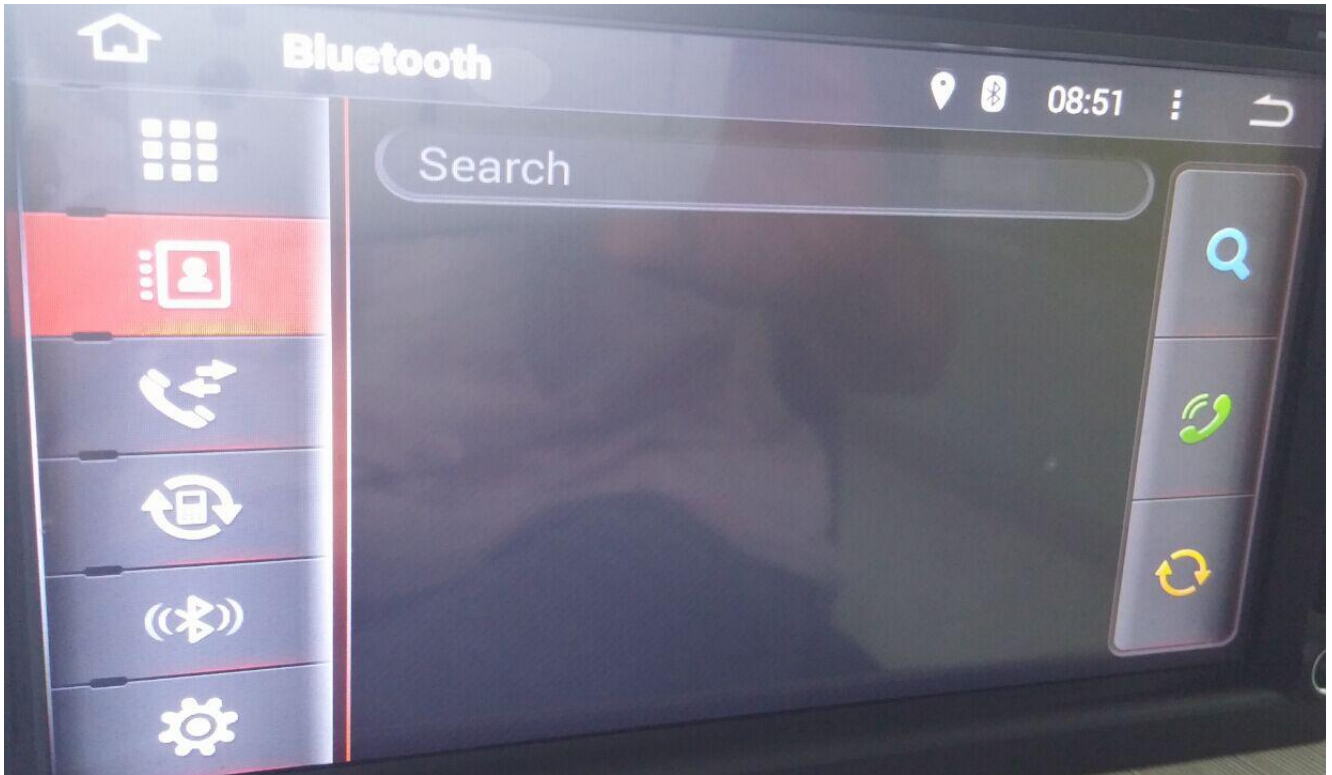

**Step 4 :** Open the Torque app and make some default setting. Please choose the connection way, OBDII MAC address and the correct protocol for your car.



